





WINTOTAL QUICK START GUIDE -USB HARDWARE KEY

THIS IS A CLASS 1 DOCUMENT WHICH IS NONCONFIDENTIAL.

The information contained within this document is the property of TE Connectivity. It is supplied in confidence and the commercial security of the contents must be maintained. It must not be used for any purpose other than that for which it is supplied nor may any information contained in it be disclosed to unauthorised persons. It must not be reproduced in whole or in part without obtaining written permission from TE Connectivity (TE).

While TE has made every reasonable effort to ensure the accuracy of the information in this catalog, TE does not guarantee that it is error-free, nor does TE make any other representation, warranty or guarantee that the information is accurate, correct, reliable or current. TE reserves the right to make any adjustments to the information contained herein at any time without notice. TE expressly disclaims all implied warranties regarding the information contained herein, including, but not limited to, any implied warranties of merchantability or fitness for a particular purpose. The dimensions in this catalog are for reference purposes only and are subject to change without notice. Specifications are subject to change without notice. Consult TE for the latest dimensions and design specifications.

*Trademark. TE Connectivity, TE connectivity (logo), and TE (logo) are trademarks. Other logos, product and/or company names may be trademarks of their respective owners.

©2014 Tyco Electronics Corporation, a TE Connectivity Ltd. company All Rights Reserved | Indicates Change Class I Data Classification - See Policy TEC-02-04

1 of 4



User Guide

CLASS 1-Public

- To install, the user must have local Administrative rights.
- Pour installer, l'utilisateur doit avoir les droits Administratifs locaux.
- Um installieren zu können, werden lokale Adminrechte benötigt.
- Per installare, l'utente deve avere i diritti di Amministratore.
- Para instalar, el usuario debe tener derechos administrativos locales.
- Para instalar, o usuário deve ter direitos de administrador.
- 要安装用户必须具有管理员权限

Do not connect the USB Hardware Key until you are instructed to. Ne connectez pas le Dongle Hardware Key tant que vous n'y êtes pas invité. Schließen Sie das USB Hardware Key erst an, wenn Sie dazu aufgefordert werden. Non collegare il USB Hardware Key fino a quando non espressamente richiesto. No conecte el USB Hardware Key hasta que se le indique. Ligue apenas o USB Hardware Key quando isso lhe for solicitado.	
等待指示通知才连接 USB Hardware Key	
Insert. Insérez. Einlegen. Inserire. Inserire. Inserte. Insira. 放入	



CLASS 1-Public

Click. Cliquez Klicken. Fare clic. Haga clic. Clique. 点极	TE AutoPlay Image: Control Panel TE DVD RW Drive (D:); WINTOTAL_6_0_00 Image: Control Panel Winter on the specified Seneral options Using Windows Explorer View more AutoPlay options in Control Panel
Select and follow the instructions. Selectionez et suivez les instructions Auswählen und den Auweisungen folgen. Selezionare e seguire le istruzioni. Seleccione y siga las instrucciones. Selecione e siga as instruções. 选择 和跟随指示操作	78 TE Connectivity - Mentification Products
When installation complete insert USB Dongle. Une fois l'installation terminée insérer le USB Hardware Key. Wenn die Installation abgeschlossen Einsatz USB Hardware Key. Quando l'installazione completa USB HardwareKey inserto. Cuando la instalación esté completa, inserte al USB Hardware Key. Quando a instalação está pronta, insira o USB Hardware Key. 当安裝完成插入的 USB Hardware Key	

After installation, if the USB Hardware Key is removed WinTotal will revert to Demo Mode.

©2014 Tyco Electronics Corporation, a TE Connectivity Ltd. company All Rights Reserved | Indicates Change



User Guide

Tyco Electronics WinTotal Licence Agreement

Please read this Licence Agreement carefully before installing the software. By installing the software you confirm your agreement to all the terms and conditions listed in this License Agreement regarding your company's use of the Tyco Electronics Software Programme entitled WinTotal.

This is a legal Agreement between you, the end user, and Tyco Electronics Corporation (Tyco Electronics). BY INSTALLING THIS SOFTWARE YOU ARE AGREEING TO BECOME BOUND BY THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, DO NOT DOWNLOAD THE SOFTWARE.

1. GRANT OF LICENCE: WinTotal is licensed, not sold, to you for use only under this licence, and Tyco Electronics reserves any rights not expressly granted to you. Tyco Electronics grants to you, the end user, the right to use this copy, including written materials if any, of the WinTotal programme at the location, company and address, to which Tyco Electronics issued this copy of WinTotal. WinTotal is owned by Tyco Electronics and is protected by U.S. copyright laws and international treaty provisions. You agree not to alter, merge, duplicate, decompile, or reverse engineer, copy for other locations, or otherwise make this software available to any person or entity outside this location. All copies made by you are subject to the terms and conditions of this Agreement.

2. OTHER RESTRICTIONS

- You may not rent or lease WinTotal to anyone. You agree to notify Tyco Electronics promptly if "bugs' or seemingly
 incorrect or anomalous results are discovered or produced by the use of WinTotal.
- You agree that WinTotal, including written materials if any, may be modified or updated by Tyco Electronics at any time, and you agree to use any updated version of WinTotal after you are notified of such modifications or updates.
- By installing the software, you acknowledge that you have read and understood the Tyco Electronics disclaimer of Warranty and Limitation of Liability, set forth below.
- You agree to use reasonable efforts to protect against the unauthorised copying and use of WinTotal by others.

3. DISCLAIMÉR OF WARRANTY THE WINTOIAI PRÒGRAM AÑO ACCOMPANYING WRITEŇ MAŤERIALS ARE PROVIDED "ÁS IS" WITHOUT WARRANTY OF ANY KIND. THE ENTIRE RISK AS TO THE RESULTS AND PERFORMANCE OF THE WINTOIAI PROGRAMME IS ASSUMED BY YOU. TYCO ELECTRONICS DOES NOT WARRANT THAT THE FUNCTIONS CONTAINED IN WINTOIAI WILL MEET YOUR REQUIREMENTS OR THAT THE OPERATION OF WINTOIAI WILL BE UNINTERRUPTED OR ERROR FREE, OR THAT PROGRAMME DEFECTS WILL BE CORRECTED.

4. LIMITED WARRANTY-MEDIA THE MEDIUM ON WHICH THE SOFTWARE IS ENCODED IS WARRANTED TO BE FREE FROM DEFECTS IN MATERIAL AND WORKMANSHIP UNDER NORMAL USE FOR A PERIOD OF SIXTY (60) DAYS FROM THE DATE OF DELIVERY TO YOU AS EVIDENCED BY A COPY OF YOUR RECEIPT. THE ENTIRE LIABILITY OF TYCO ELECTRONICS AND YOUR EXCLUSIVE REMEDY IF THE MEDIUM IS DEFECTIVE SHALL BE THE REPLACEMENT OF THE SOFTWARE.

5. EXCLUSION OF ALL OTHER WARRANTIES EXCEPT AS EXPRESSLY PROVIDED ABOVE, TYCO ELECTRONICS DISCLAIMS ALL WARRANTIES, EITHER EXPRESS, IMPLIED, OR STATUTORY, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PURPOSE, EVEN IF TYCO ELECTRONICS HAS BEEN ADVISED OF SUCH PURPOSE. THIS AGREEMENT GIVES YOU THE SPECIFIC LEGAL RIGHTS. SOME COUNTRIES DO NOT ALLOW THE EXCLUSION OF WARRANTIES, SO THAT THE ABOVE EXCLUSION MAY NOT APPLY TO YOU.

6. LIMITATION OF LIABILITY TYCO ELECTRONICS SHALL NOT BE LIABLE FOR ANY LOSS, DAMAGE, OR DELAY DURING SHIPMENT OR FOR ANY LOSS OF PROFITS, LOSS OF USE, INTERRUPTION OF BUSINESS, NOR FOR INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND WHATEVER UNDER THIS AGREEMENT OR OTHERWISE, WHETHER OR NOT TYCO ELECTRONICS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

7. TERMINATION: This Licence will automatically terminate without notice from Tyco Electronics if you fail to comply with any term or condition of this Agreement. You agree, upon such termination, to return WinTotal or destroy it along with any backup or other copies in your possession.

8. COMPLETE ÅGREEMENT: This Agreement constitutes the sole and complete understanding between the parties with respect to WinTotal and its use, and may not be varied except in writing signed by an authorised signatory of Tyco Electronics. You agree that you may not rely on any representations concerning WinTotal to the extent they vary from this Agreement, and such representations, if any, will neither add to nor vary the terms of this Agreement.

9. CHOICE OF LAWS: This Agreement is governed by the laws of State of New York.

10. ASSIGNMENT: You may neither assign any right nor obligation under this Agreement and any attempted assignment or delegation shall be void.

11. INVALID PROVISIONS: If any of the provisions of this Agreement are invalid under any applicable statute or rule of law, they are to that extent deemed omitted.

©2014 Tyco Electronics Corporation, a TE Connectivity Ltd. company All Rights Reserved | Indicates Change Class I Data Classification - See Policy TEC-02-04