

Troubleshooting	52
<i>There is no output signal, and/or the selection tool is not behaving as expected</i>	52
<i>Aspect ratio is not being maintained correctly</i>	52
<i>Mitto reports a different resolution from the settings you have applied to your computer</i>	52
<i>Can I configure Mitto to work with a laptop?</i>	52
<i>BrightEye Mitto is not converting VGA to DVI</i>	53
<i>Using monitors that have HDMI input instead of DVI input with Mitto</i>	53
<i>Why is my output is a mass of snow or color noise?</i>	53
<i>I can't see the Selection Tool</i>	53
<i>I'm using a VGA input and the output screen is blue</i>	53
<i>I see artifacts at the edge of the output</i>	53
<i>It looks like there are color artifacts on the text of the output</i>	53
Software Updating	54
Warranty	54
Factory Service	54
Specifications for BrightEye Mitto Pro; Models BEM-3 and BEM-3F	55
Glossary	57