
Installation

Connecting the HDMI to Composite / S-Video Scaler

- 1. Connect the included HDMI cable from the Hi-Def source to the HDMI connector of the HDMI to Composite / S-Video Scaler.
- Connect a Composite cable (RCA-type) between the HDMI to Composite / S-Video Scaler and the Composite input on the display or A/V receiver. Optionally connect an S-Video cable from the HDMI to Composite / S-Video Scaler to the display or an A/V receiver. Both the Composite and S-Video outputs are active at all times.
- Connect two RCA-type cables (usually part of the Composite cable) between the L and R connectors on the *HDMI to Composite / S-Video Scaler* and the L and R connectors on the display or A/V receiver.
- Connect the included 5V DC power supply to the power receptacle on the HDMI to Composite / S-Video Scaler and connect the power cord to an available electrical outlet.

Sample Wiring Diagram

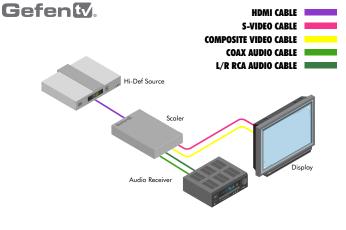

GTV-HDMI-2-COMPSVIDSN