



Instruction Sheet

TVB-2

Test Verification Box

Item 99-10826-01

Printed May 24, 2016
Version 1.02

DECLARATION OF CONFORMITY



Manufacturer: Slaughter Company, Inc.

Address: 28105 N. Keith Drive,
Lake Forest, IL 60045, USA

Product Name: Verification Load Box

Model Number: TVB-2

Conforms to the following Standards:

Safety: IEC 61010-1:2010
EN 61010-1:2010
UL 61010-1:2012
CAN/CSA-22.2 NO. 61010-1-12

EMC: EN 61326-1:2013

Supplementary Information

The product herewith complies with the requirements of the **Low Voltage Directive 2014/35/EU** and the **EMC Directive 2014/30/EU**.

The technical file and other documentation are on file with Slaughter Company, Inc., Inc.

A handwritten signature in black ink, appearing to read 'Joseph Guerriero'.

Joseph Guerriero
President
Slaughter Company, Inc.
Lake Forest, Illinois USA

April 18, 2016

TVB-1 Technical Specifications

MODEL	TVB-2	
Components	Resistor Specification	
120k Ω	2.5KVAC / 50W / 1% \pm 50ppm	
1M Ω	3KVDC / 3W / 1% \pm 50ppm	
0.5 Ω	350VDC / 2W / 5% \pm 300ppm	
49m Ω	100VDC / 50W / 1% \pm 50ppm	
100m Ω	100VDC / 25W / 1% \pm 100ppm	
GENERAL		
Test Points	Test Condition	Specifications
PASS ACW/DCW 2M Ω / 6W	1. ACW: 1240V, 10mA or DCW: 2121V, 5000uA 2. Maximum Voltage 2500V 3. Test duty cycle, OFF time = ON time x 2 4. Maximum ON time limit 30 seconds 5. Recommended 2s ramp time	2%
FAIL ACW/DCW 120k Ω / 50W	1. ACW: 1240V, 10mA or DCW: 2121V, 5000uA 2. Maximum Voltage 2300V 3. Test duty cycle, OFF time = ON time x 8 4. Maximum ON time limit 5 seconds 5. Recommended 2s ramp time	2%
PASS IR 4M Ω / 12W	1. IR: 500V, 2M Ω 2. Maximum Voltage: 2500V	2%
FAIL IR 1M Ω / 3W	1. IR: 500V, 2M Ω 2. Maximum Voltage 1000V	2%
PASS GC 0.5 Ω / 2W	1. GC: 0.1A, 1 Ω 2. Maximum Current 1A	5%
FAIL GC 2 Ω / 8W		5%
PASS GB 50m Ω / 50W	1. GB: \leq 30A, 100m Ω 2. Maximum Current 30A 3. Test duty cycle, OFF time = ON time x 6 4. Maximum ON time limit 5 seconds 5. Maximum resistance range at 30A is 200m Ω ¹	5%
FAIL GB 200m Ω / 50W	1. Test Current 15A 2. Test duty cycle, OFF time=ON time x 6 3. Maximum ON time limit 10 seconds 4. Maximum resistance range at 30A is 200m Ω ¹	3%
Environment	32° F - 104° F (0° - 40° C)	
Dimensions	7.3" (W) x 5.75" (L) x 2.95" (H) , 186mm x 146mm x 75 mm	
Weight	1.55 lbs	

¹**Note:** if the resistance is greater than 200m Ω you must reduce the test current to 10A in order to display the actual resistance reading.

¹**Note:** si la résistance est supérieure à 200m Ω vous devez réduire le courant de test par 10A afin d'afficher la valeur de la résistance réelle.

Symbols Explanation



Please refer to the instruction manual for specific warning or caution information to avoid personal injury or damage to the product.

S'il vous plaît se référer au manuel d'instructions de mise en garde ou information sur la prudence pour éviter des blessures ou des dommages au produit



To indicate hazardous voltages may be present.

Avertissement des tensions dangereuses qui peuvent être présentes

General Information

The TVB-2 is a go/no-go load box for verifying that the failure detectors of your Slaughter Compay, Inc. electrical safety testing instrument are functioning properly. Use the TVB-2 daily before you begin performing Hipot, Insulation Resistance, Ground Bond and Ground Continuity tests. The TVB-2 is not intended to comply with any specific safety agency standard.

Note: the trip setting may vary up to 10% of the set value based on the combined tolerances of the instrument and the components used in the TVB-2.

Using the TVB-2

The TVB-2 load box consists of resistors of varying types that induce a PASS or FAIL condition depending on the test parameters that are set in your electrical safety tester. The 8 banana jacks located on the top of the box can be used to apply the corresponding load to the output of your tester. Each banana jack should be used for a particular type of test, which is outlined on the layout of the load box.


To setup a test, connect the high voltage or high current test lead of your electrical safety tester to one of the GC, GB, ACW/DCW, or IR test points. Connect the return lead to the Return point. Ensure that the settings on your electrical safety tester are less than or equal to the maximum recommended voltage, current and duty cycle settings of the TVB-2. When all connections have been made, press the TEST button to begin the test. With the correct settings entered into the electrical safety tester, connecting the output leads to a PASS terminal should result in a PASS. Connecting the output leads to a FAIL terminal should result in a FAIL.



Note: pay close attention to the maximum voltage and duty cycle limitations of each resistor. Applying voltages that are higher than the recommended maximum setting or duty cycles greater than indicated can cause damage to the TVB-2.


Note: attention à la tension maximale et les limites du cycle de travail de chaque résistance. L'application de tensions plus élevées que le réglage maximum recommandé ou cycles de travail supérieures à celles indiquées peut causer des dommages à la TVB-2

Ground Continuity Verification

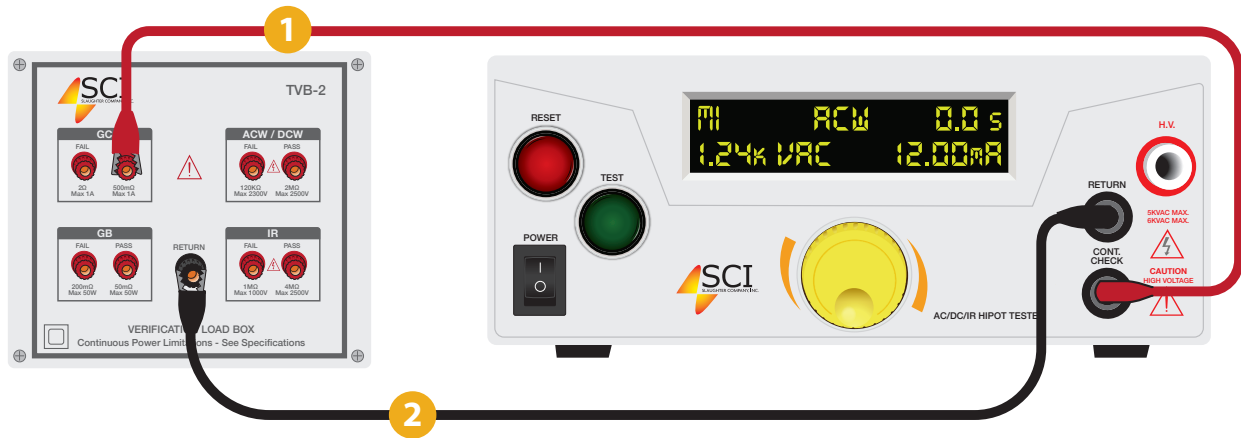


- 1 Connect the high current lead (part #99-10009-01) from the CURRENT terminal on the SCI 4320 to the PASS terminal under the GC terminals on the TVB-2 box.
- 2 Connect the return black alligator clip lead (part #99-10008-01) from the RETURN terminal on the SCI 4320 to the RETURN post on the TVB-2 box.
- 3 Perform the necessary PASS/FAIL test per the Specifications Table.

Ground Bond Verification

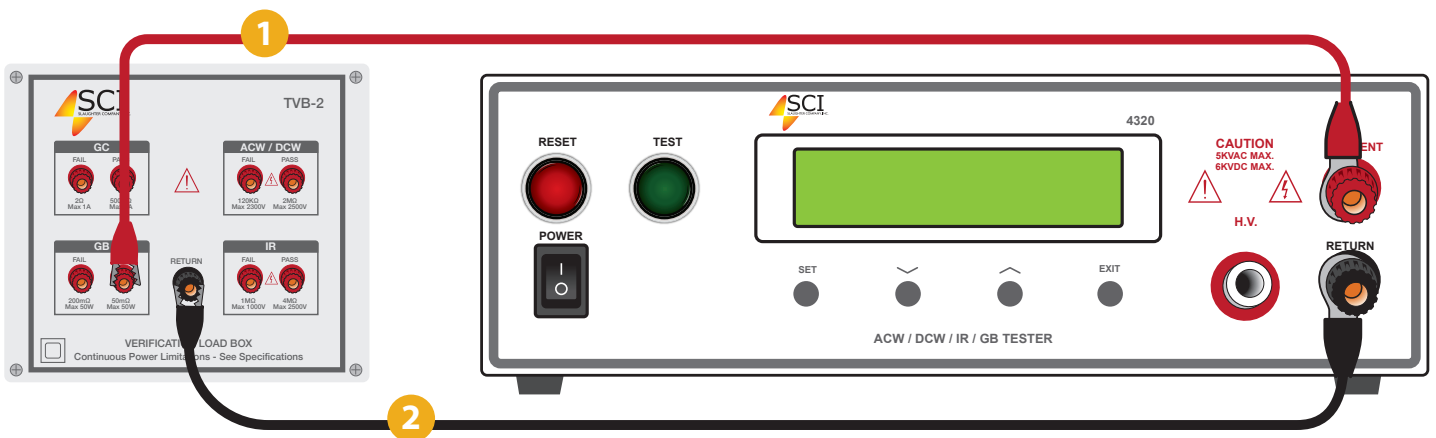


- 1 Connect the high current lead (part #99-10009-01) from the CURRENT terminal on the SCI 4320 to the PASS terminal under the GB terminals on the TVB-2 box.
- 2 Connect the return black alligator clip lead (part #99-10008-01) from the RETURN terminal on the SCI 4320 to the RETURN post on the TVB-2 box.
- 3 Perform the necessary PASS/FAIL test per the Specifications Table.

Hipot Verification

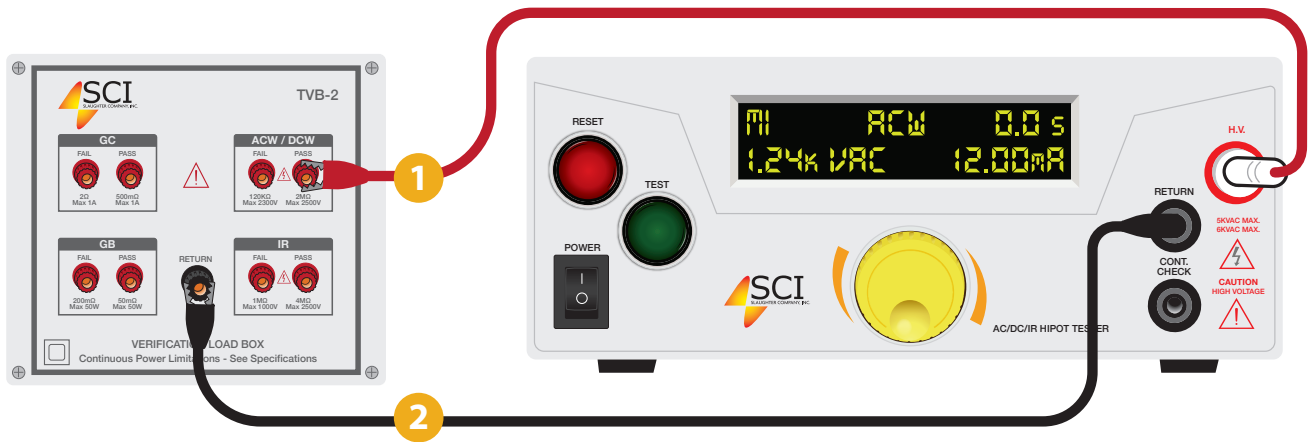

- 1 Connect the high voltage lead (part #102-055-913) from SCI 4320 HV terminal to the PASS/FAIL terminal on the ACW/DCW terminals on the TVB-2 box.
- 2 Connect the return black alligator clip lead (part #99-10008-01) from RETURN terminal on the SCI 4320 to the RETURN post on the TVB-2 box.
- 3 Perform the necessary PASS/FAIL test per the Specifications Table.

Insulation Resistance Verification

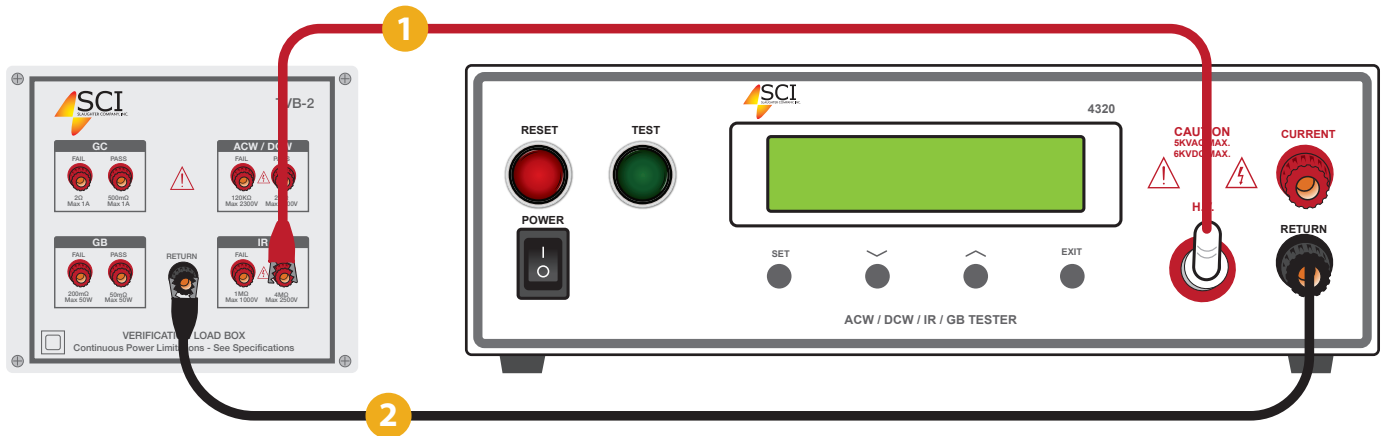


- 1 Connect the high voltage lead (part #102-055-913) from SCI 4320 HV terminal to the PASS/FAIL terminal on the IR terminals on the TVB-2 box.
- 2 Connect the return black alligator clip lead (part #99-10009-01) from the RETURN terminal on the SCI 4320 to the RETURN post on the TVB-2 box.
- 3 Perform the necessary PASS/FAIL test per the Specifications Table.

Recommended Test Parameter Conditions


The following table illustrates the resistor values and recommended test parameter settings for each type of test. Pay close attention to the duty cycle limitations in the specifications in order to avoid damaging the TVB-2 load box.

	ACW	DCW	IR	GC	GB
PASS	2M Ω	2M Ω	4M Ω	500m Ω	50m Ω
FAIL	120k Ω	120k Ω	1M Ω	500m Ω	2M Ω
Instrument Settings	1240V 10mA	2121V 5000 μ A	500V 2M Ω	1 Ω	30A 100m Ω
Ramp	2s	2s	N/A	N/A	N/A

 **WARNING:** The test voltages and currents which can cause harmful or fatal electric shock. To prevent accidental injury or death, these safety procedures must be strictly observed when handling and using the test instrument.

Les tensions et les courants qui peuvent causer des chocs électriques dangereux ou fatal. Pour éviter les blessures accidentelles ou la mort, ces procédures de sécurité doivent être strictement observées lors de la manipulation et l'utilisation de l'instrument de test

 **Not rated for measurements within MEASUREMENT CATEGORIES II, III, or IV**
N'est pas classé pour les catégories de surtension II, III ou IV

 **DO NOT TOUCH WHEN TESTING OR AFTER A MALFUNCTION HAS OCCURRED.**
NE TOUCHEZ PAS LORS DE L'ESSAI OU APRÈS UN DYSFONCTIONNEMENT DU PRODUIT

CAUTION: Never connect TVB-2 to any mains circuit directly

ATTENTION: Ne jamais connecter directement le TVB-2 à un circuit d'alimentation.

MAINTENANCE:

To prevent electric shock do not remove the instrument cover. There are no user serviceable parts inside. Routine maintenance or cleaning of internal parts is not necessary. Any external cleaning should be done with a clean dry or slightly damp cloth. Avoid the use of cleaning agents or chemicals to prevent damage plastic parts or lettering.

ENTRETIEN:

Pour éviter les chocs électriques ne pas enlever le couvercle de l'instrument. Il n'y a aucune pièce réparable par l'utilisateur. L'entretien de routine ou le nettoyage des pièces internes ne sont pas nécessaires. Tout nettoyage externe doit être fait avec un chiffon sec ou légèrement humide. Éviter l'utilisation de produits de nettoyage ou des produits chimiques pour éviter d'effacer les lettres ou d'abîmer les pièces en plastique.

OPERATING ENVIRONMENT:

This instrument may be operated in environments with the following limits:

- Indoor Use Only
- Altitude: 2000 m
- Temperature: 0°C to 40°C
- Humidity: Maximum 80% RH at 31°C decreasing to 50% RH at 40°C
- Pollution Degree: 2